


# FabWall Installation

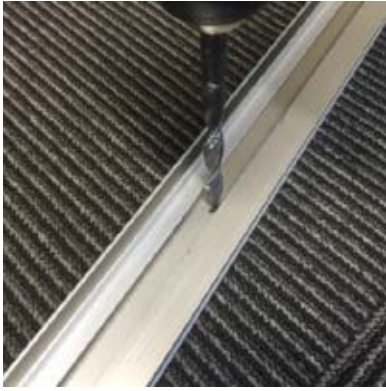

Drill holes in the top and bottom profile for the wall installation.



Insert the corner brackets into the tracks of the top and bottom profile of the frame. Screws may need to be loosened to allow brackets to slide into position



Insert the extension brackets into the tracks of the top and bottom profile of the frame.



Starting at the top left corner, attach the top and the side profile. Do not tighten the screws until all sides are attached. Ensure all corners are aligned, then tighten all screws using the allen key.



Lay out the fabric skin and start inserting it with its silicone keddar into the rail at the corners of one side. and then at the other corners.



Continue to slide the fabric skin into the profile and on the bottom corner on the other side.



To remove skin from the frame, pull the white cloth.